


PENETRATION MUST BE PROPERLY ANCHORED, GROUTED AND CAULKED VOID MAY BE FILLED WITH SOPREMA MASTIC OR EQUAL


APPLY COLPHENE 3000 TIGHTLY OVER PIPE PENETRATION AND ONTO BASE COAT OF COLPHENE LIQUID MEMBRANE

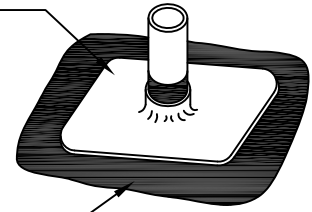

COLPHENE LIQUID MEMBRANE

NOTES:

1. DETAIL TO BE USED IN CONJUNCTION WITH SOPREMA GENERAL REQUIREMENTS, APPLICATION METHODS AND APPROVED DETAILS.
2. PENETRATIONS MUST BE FIRMLY SECURED AND PROPERLY PREPARED PRIOR TO THE INSTALLATION OF NEW MATERIALS. APPLY APPROVED ELASTOCOL PRIMER AS NEEDED.

		310 QUADRAL DRIVE WADSWORTH, OHIO 44281 (330) 334-0066	
TITLE COLPHENE 3000 - PENETRATION FLASHING			
SCALE NONE	DWN TM	CHK RS	APPROVAL DATE 11/15/2012
DRAWING NUMBER BGW-5			REV 0

** USAGE OF THIS DRAWING IS GOVERNED BY THE TERMS OF SERVICE FOR SOPREMA DETAIL. PLEASE CONSULT THESE TERMS OF SERVICE PRIOR TO UTILIZING THIS DRAWING.