



Step 4 – Installing Jamb Flashing

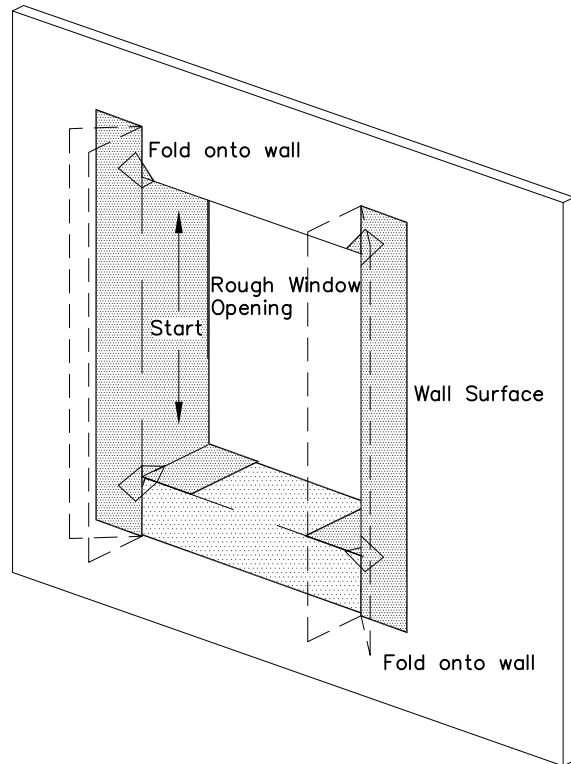


A. PRE-FOLD FLASHING INTO WINDOW OPENING WITH RELEASE LINER STILL ON.

B. REMOVE RELEASE LINER FROM BACK SIDE OF FLASHING AND ROLL FIRMLY INTO PLACE.

Step 5 – Installing Head Flashing

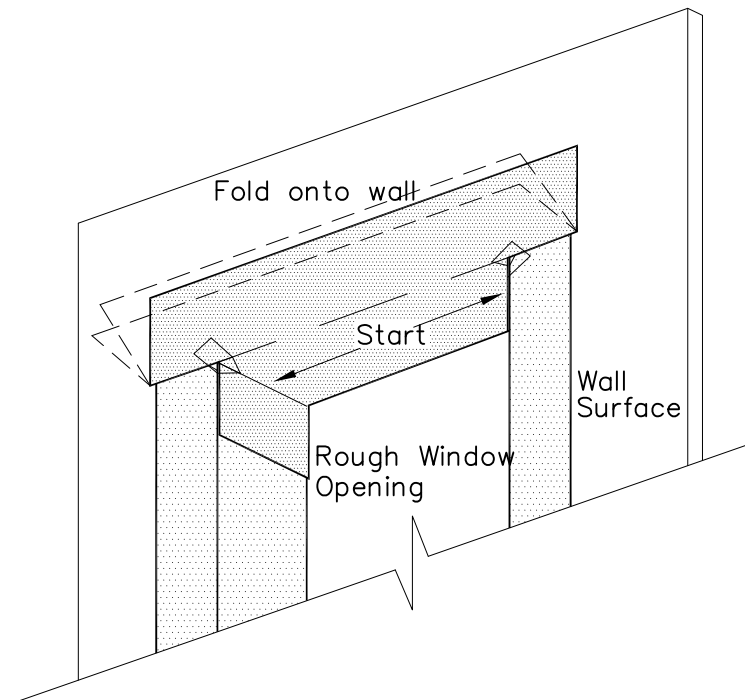

		310 QUADRAL DRIVE WADSWORTH, OHIO 44281 (330) 334-0066	
		TITLE WINDOW FLASHING DETAIL (2 OF 3)	
SCALE	DWN	CHK	APPROVAL DATE
NONE	TM	JG	02/10/16
DRAWING NUMBER			REV
ABLM202VP002			1

** USAGE OF THIS DRAWING IS GOVERNED BY THE TERMS OF SERVICE FOR SOPREMA DETAIL. PLEASE CONSULT THESE TERMS OF SERVICE PRIOR TO UTILIZING THIS DRAWING.