


Step 6 – Installing Field Membrane (Fluid Applied)

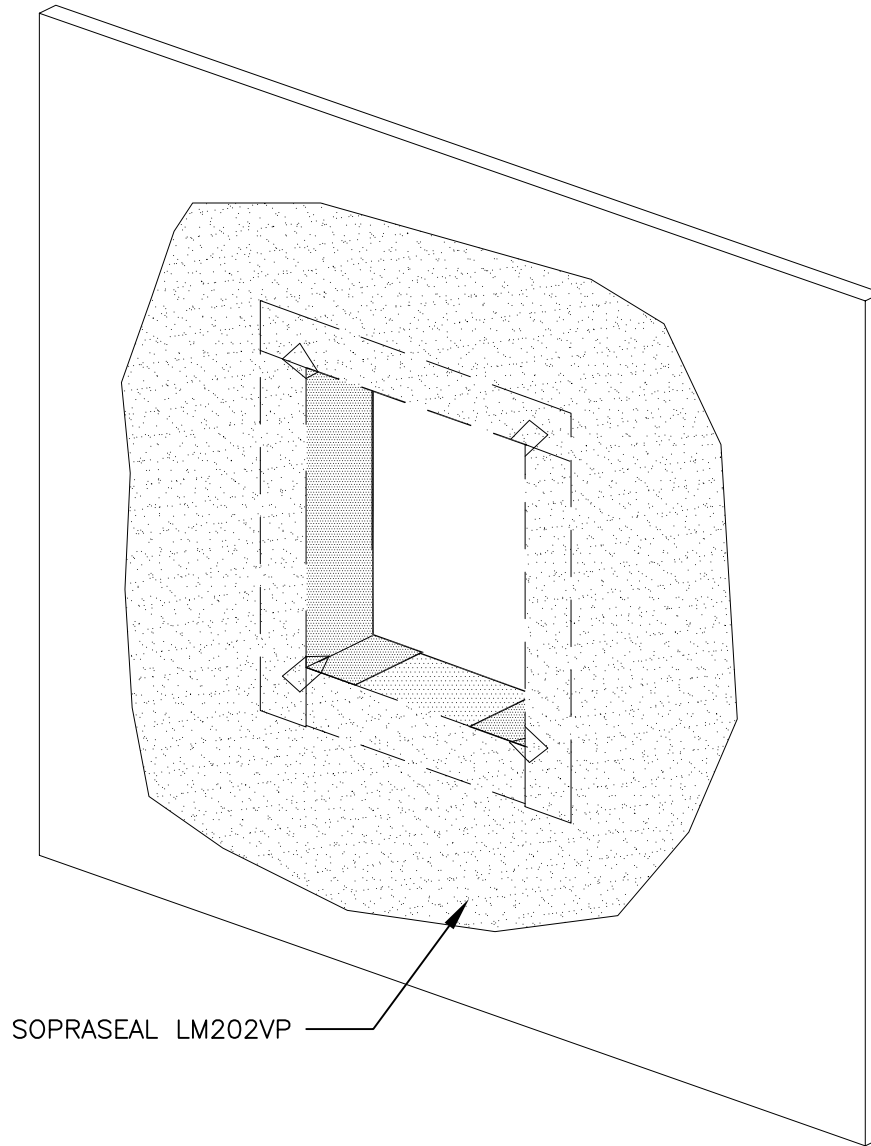

SOPRASEAL LM202VP



310 QUADRAL DRIVE
WADSWORTH, OHIO 44281
(330) 334-0066

TITLE			
WINDOW FLASHING DETAIL (3 OF 3)			
SCALE	DWN	CHK	APPROVAL DATE
NONE	TM	JG	02/10/16
DRAWING NUMBER			REV
ABLM202VP003			1

** USAGE OF THIS DRAWING IS GOVERNED BY THE TERMS OF SERVICE FOR SOPREMA DETAIL.
PLEASE CONSULT THESE TERMS OF SERVICE PRIOR TO UTILIZING THIS DRAWING.