


Step 6 – Installing Field Membrane (Liquid Applied)

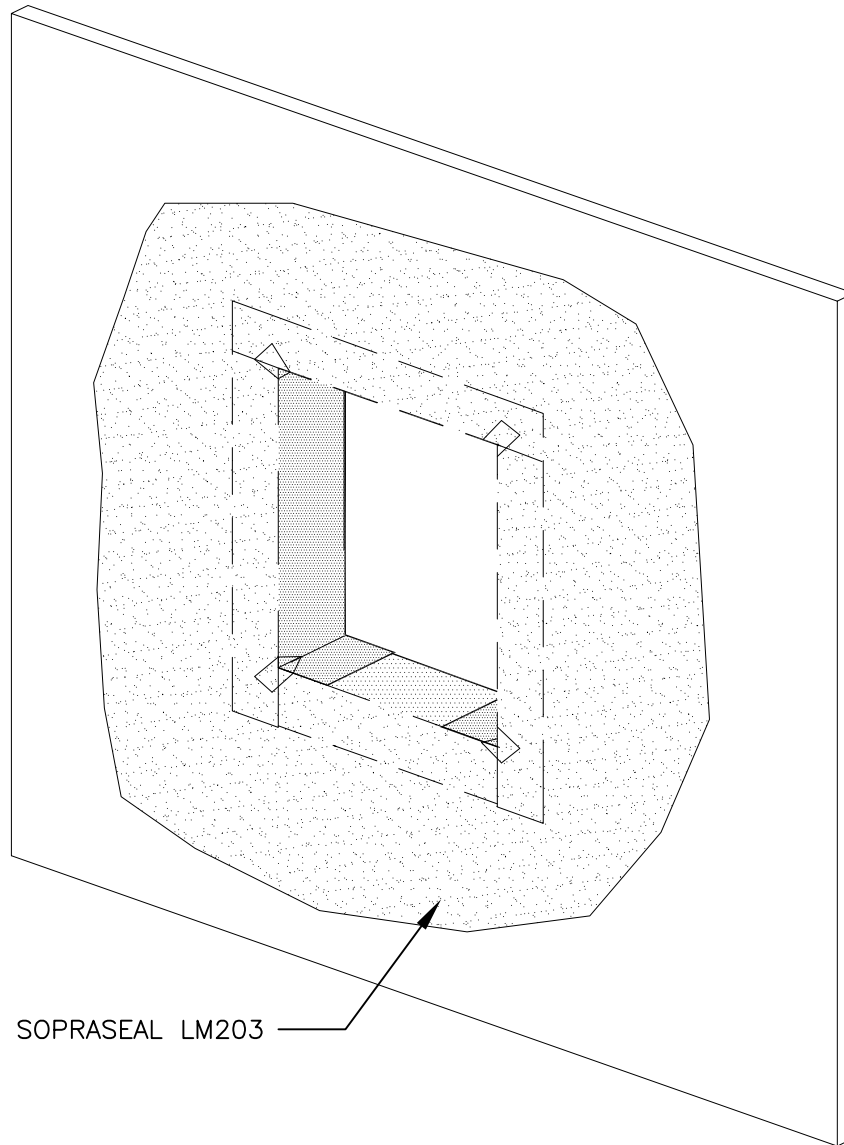

SOPRASEAL LM203



310 QUADRAL DRIVE  
WADSWORTH, OHIO 44281  
(330) 334-0066

TITLE			
WINDOW FLASHING DETAIL (3 OF 3)			
SCALE	DWN	CHK	APPROVAL DATE
NONE	TM	JG	02/11/16
DRAWING NUMBER			REV
ABLM203003			1

\*\* USAGE OF THIS DRAWING IS GOVERNED BY THE TERMS OF SERVICE FOR SOPREMA DETAIL.  
PLEASE CONSULT THESE TERMS OF SERVICE PRIOR TO UTILIZING THIS DRAWING.