



DETAIL NOTE KEY

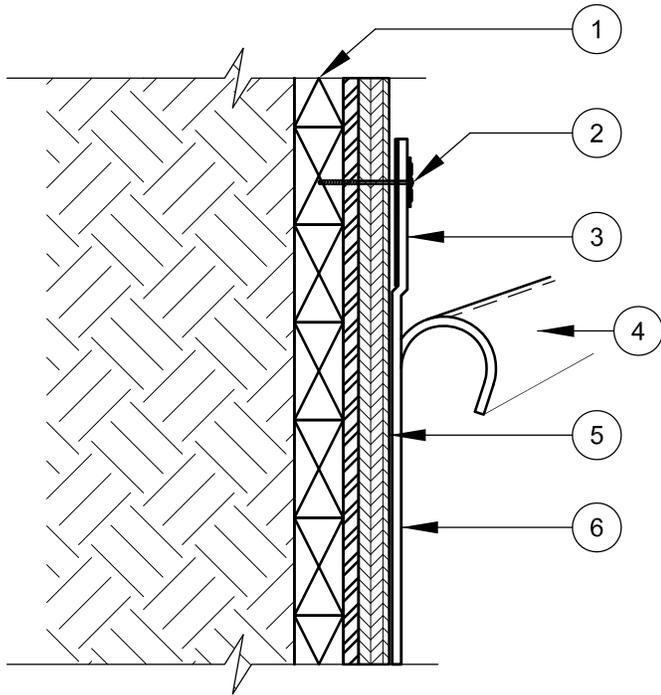

- ① LAGGING OR SHOTCRETE SOIL RETENTION SYSTEM OR EXISTING CONCRETE WALL.
- ② TEMPORARY FASTENER & PLATE
- ③ COLPHENE BSW-H TAB W/ MIN. 6" WIDE TAB LEFT IN PLACE FOR LAP.
- ④ BEFORE INSTALLATION LIGHTLY HEAT & EMBED GRANULES TO LEAVE 6" WIDE BAND FOR LAP SPLICE.
- ⑤ PROTECTION BOARD, INSULATION OR DRAINAGE LAYER AS REQUIRED.
- ⑥ COLPHENE BSW-H APPLIED TO PROTECTION BOARD, INSULATION OR DRAINAGE LAYER.
- ⑦ COLPHENE BSW-V
- ⑧ COLPHENE BSW-H TAB EMBEDDED IN COLPHENE LIQUID MEMBRANE.

STEP 1

SEQUENCE OF CONSTRUCTION

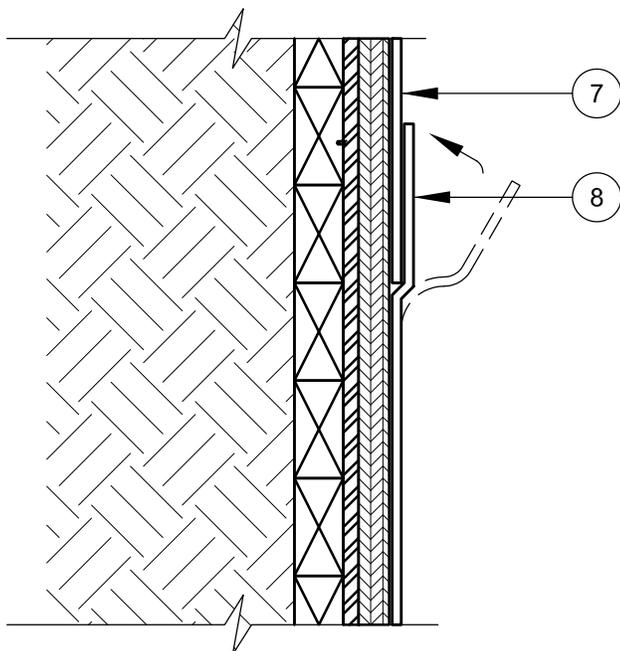

1. PREPARE FORMWORK AS REQUIRED FOR INSTALLATION OF SOPREMA COLPHENE BSW-V MEMBRANE.
2. EMBED GRANULES ON BACK SIDE OF BSW-H SHEET ALONG TOP EDGE CREATING 6" TAB FOR LAP SPLICE & INSTALL SHEET OVER PROTECTION BOARD, INSULATION OR DRAINAGE LAYER.
3. INSTALL TEMPORARY FASTENERS/PLATE TO SECURE BSW-H ALONG LAP EDGE.
4. FOLLOWING POUR, REMOVE TEMPORARY FASTENERS/PLATES, INSTALL SUBSEQUENT LAYER OF BSW-V MEMBRANE BEHIND TAB OF PREVIOUSLY INSTALLED BSW-H MEMBRANE.
5. EMBED COLPHENE-H IN COLPHENE LIQUID MEMBRANE.

STEP 2

NOTE: REFER TO SOPREMA RELATED PUBLISHED DOCUMENTATION, PRODUCT DATA SHEETS (PDS) & SAFETY DATA SHEETS (SDS) FOR ADDITIONAL INFORMATION. ALL DETAIL DRAWINGS & RELATED INSTALLATION GUIDELINES ARE PROVIDED BY SOPREMA FOR THE SOLE PURPOSE OF SOPREMA WARRANTY QUALIFICATION. ACCORDINGLY, ANY DETAILS DRAWINGS PROVIDED ARE NOT OFFERED AND SHOULD NOT BE CONSIDERED A SUBSTITUTE FOR PROFESSIONAL DESIGN SERVICES. USAGE OF THIS DRAWING IS GOVERNED BY THE TERMS OF SERVICE FOR SOPREMA DETAIL, PLEASE CONSULT THESE TERMS OF SERVICE PRIOR TO UTILIZING THIS DRAWING.

310 QUADRAL DRIVE
WADSWORTH, OHIO 44281
(330) 334-0066

SOPREMA

STANDARD TIE-IN DETAIL COLPHENE BSW-V TO COLPHENE BSW-H				
REVISION	ISSUE DATE	SCALE	DRAWN BY	
0	12-20-2016	N.T.S.	DRW	

DRAWING NO.:
STD-06

STD06